


CAT BACK EXHAUST KIT, STAINLESS STEEL




IMPORTANT! PLEASE READ ALL INSTRUCTIONS COMPLETELY BEFORE YOU BEGIN.

CAUTION! Exhaust system must be cooled down before installation may begin.
Protective eyewear must be used.
Due to rust and corrosion a thread penetrant will need to be applied to all bolts.


Step 1. Loosen the clamp that holds the muffler to the front exhaust pipe.
This clamp is located just behind the muffler near the rear axle.

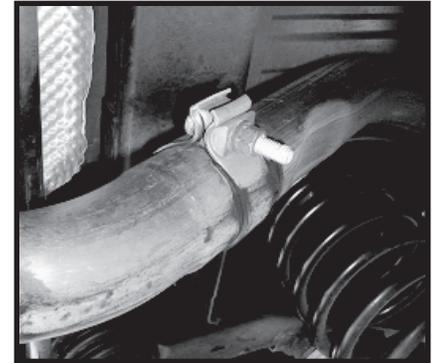

Step 2. Remove the muffler from the (2) rubber isolator mounts. A spray lubricant may be needed.

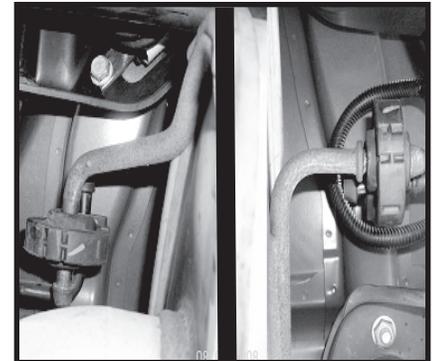

Step 3. Install the new exhaust by first attaching the muffler to the rubber isolator hangers.

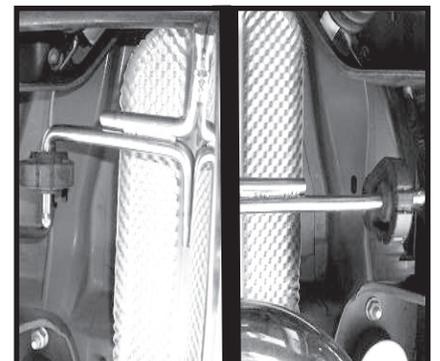

Step 4. Slide the exhaust clamp over the the pipe extending out of the rear of the muffler. Next slide the pipe over the factory exhaust pipe. Start the vehicle and inspect for leaks.



For Technical Assistance Contact:
OMIX-ADA Tech Support
Phone: 1-800-449-6649
Email: techsupport@omix-ada.com
Web: www.Omix-Ada.com