

## Auto Trans Shift Knob Billet Aluminum JK 07-10

Contents: Shifter Handle (1)




PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE YOU BEGIN.


Step 1. Remove the factory shift handle. Using a flat blade screwdriver pry the lower shift handle cover down.



Step 2. Using a T15 torx bit remove the handle lock screw. Do not discard the screw it will be used to hold the new handle on. Once the screw has been removed slide the handle up and remove.

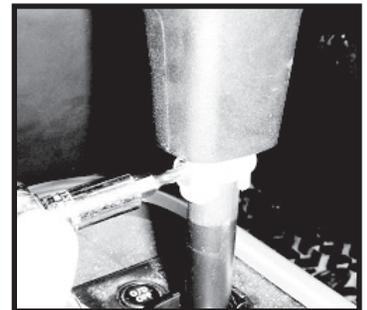

Step 3. Slide the new handle onto the shifter shaft. Align the set screw hole. Insert the set screw previously removed and tighten. Test shifter for proper function before operating vehicle.

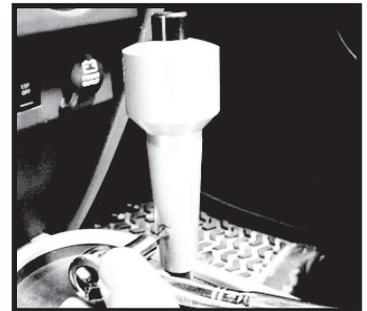

For Technical Assistance Contact:  
Omix-Ada Tech Support  
Phone: 1-800-449-6649  
Email: [techsupport@omix-ada.com](mailto:techsupport@omix-ada.com)  
Web: [www.Omix-Ada.com](http://www.Omix-Ada.com)

Copyright Omix-Ada 2011