


HOOD MOUNTED OFF ROAD LIGHT KIT, 4 IN BLACK, 100W JK 07-10




REQUIRED TOOLS.

1. 10mm Wrench
2. 9/16" Wrench
3. 3/8" Drive Ratchet
4. 13mm Deep Well Socket
5. 10" 3/8" Drive Extension
6. Wire Crimpers

1. Remove the 13 mm retaining nut on the back side of the hood catch.
2. Install the light mounting bracket with the mounting pointing towards the rear of the vehicle. Repeat this for both sides.

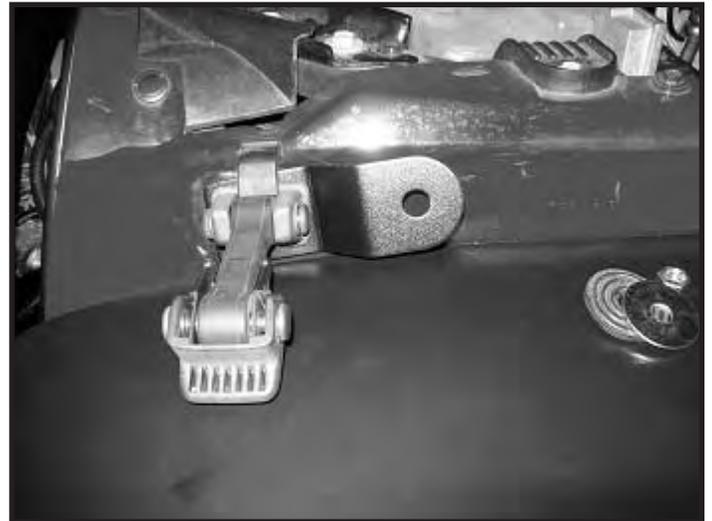

3. Install the light using a 9/16 in. wrench.

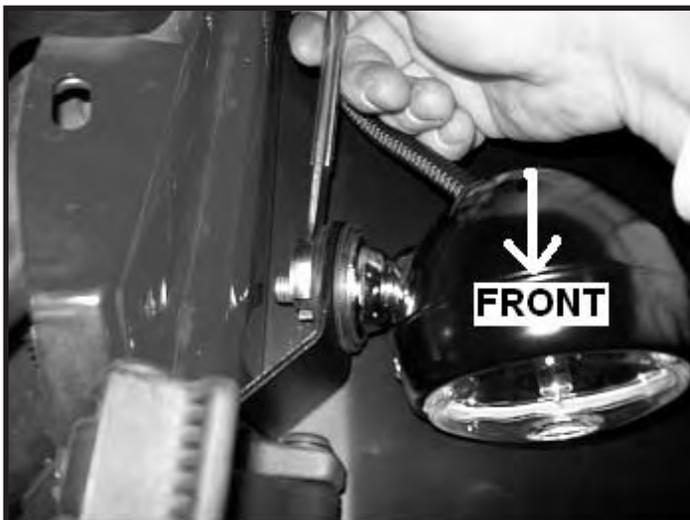

4. Install the on/off switch at a suitable location on the dash.



HOOD MOUNTED OFF ROAD LIGHT KIT, 4 IN BLACK, 100W JK 07-10

5. Make a small cut in the grommet located in the driver side kick panel area, Route the on/off switch wire through the grommet. A small amount of silicone may be applied to seal the hole.



6. Connect the blue wire from the relay to either the main power terminal in the fuse block or directly to the battery. Follow the wiring diagram below to complete the installation.



WIRE HARNESS DIAGRAM FOR 2 LIGHT

